

101146 Spanish Talking Alarm Watch User Manual

Symbol function/ button position



Alarm Icon



15: Hourly Announcement, 15 hours



 
24: Hourly Announcement, 24 hours

PM: Afternoon time indicator

AL : Alarm clock setting indicator



Mode Control: Press S4 button to change the Mode according to the following order:

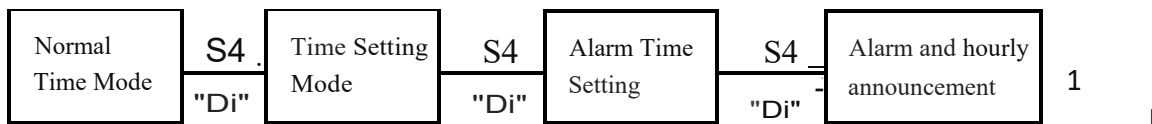

1. Set time

Press S4(MODE) button one time to enter into time setting mode. Watch digits will flash.

Press S2(MIN) to adjust minutes, and press S3 (HOUR) to adjust the hour to the current time. To hear the current time, press S1.

2. Set alarm time

Press S4(MODE) button two times to enter into alarm time setting mode. AL symbol displays, and numbers flicker. Press S2(MIN) to adjust minutes, and press S3 (HOUR) to adjust the hour to the desired alarm time,

3. Turn Alarm on/off

Press S4(MODE) button three times. Both alarm symbol and hourly announcement symbol will flicker. Press S2 to set alarm on/off: when alarm symbol turns black and you hear a high beep, alarm is on. When alarm symbol turns green and you hear a low beep, alarm is off.

4. Hourly Announce

Press S4(MODE) button three times. Press S3 one time to turn on hourly announce. You will hear 1 high beep and Announcement 2 displays 📶 24. This means the hourly announce will go off all 24 hours. Press S3 a second time, and 📶 15 appears, and you hear 2 beeps. This means the hourly announce will go off 15 hours, 7am to 9 pm, and stay silent during nighttime hours. If you press S3 a third time, the hourly announce turns off and you hear a lower beep.

5. 12/24 hour change, Alarm Sound Choice

In normal time mode, press S3 to change between 12 and 24 hour time for the time display. Press S2 to choose the alarm sound. Choice of three alarm sounds.

Specifications:

Accuracy: 8 seconds more or less Battery: AG13

Weight:74 g

Width of Watch Shell: 40mm

The length of watch and band is 250MM