

#421092

YL-101 TALKING FOOD THERMOMETER INSTRUCTION

1. Use a clean thermometer. Wash the thermometer probe (the part inserted into the food) with hot soapy water before/after each use.

****DO NOT immersed whole thermometer in water.****

2. Press "ON/OFF" button to switch it on or off.

3. Insert the thermometer into the center of the thickest portion, placed midway of the food. About 10 seconds are required for the temperature to be accurately displayed.

4. Press the "F.T" button for fast test of food temperature. There is "di di di" sound last 1 minute to show that is under fast testing for the food temperature.

5. Press "TALKING" button to speak the food temperature in Fahrenheit.

6. The thermometer will auto power off after half an hour.

7. If a food is irregularly shaped, you may need to check the temperature in several places. Allow micro-waved food to stand for a few minutes after cooking; this distributes the heat, cooking the food evenly.

8. The temperature range is from -4 to +390° F.

*******ATTENTION*******

If the LCD screen fades and the sound becomes weak or the function is abnormal, please change the battery (CR2032x1pc)