



PATHWAY

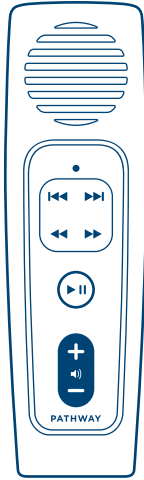

EASY START

Press and hold **▶||** until the LED lights up and PATHWAY beeps. PATHWAY will turn on and resume playback from the last playback position.

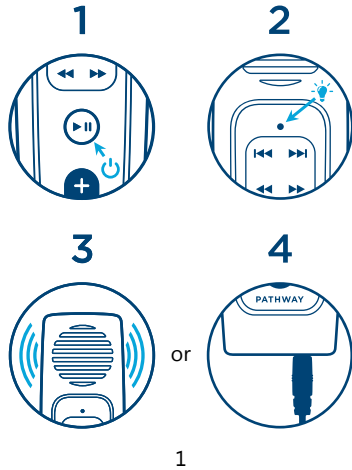

1

2

3

4

TURNING PATHWAY ON/OFF

To turn PATHWAY on, press and hold **▶||** in the middle of the keypad until the LED lights up and the player beeps.

Press **▶||** again for 2 seconds to turn the player off (player will beep twice and turn the LED off).

NAVIGATING DURING PLAYBACK

See structuring rules under **INTERNAL MEMORY**.

PATHWAY contains one or more Books. Each Book contains one or more Chapters (or audio files).

Click **◀◀** or **▶▶** to jump backward or forward one Book.

When **◀◀** is clicked and the first Book in the memory is currently playing, the last Book will be played.

When **▶▶** is clicked and the last Book is being played, the first Book will be played.

Continuous press¹ on **◀◀** or **▶▶** will continue to skip to the beginning of the previous/next Book until the button is released or the last/first Book is reached.

Click **◀◀** or **▶▶** to jump backward or forward one Chapter within the current Book.

When **◀◀** is clicked, and the first Chapter is currently playing, the last Chapter in the previous Book will be played.

When **▶▶** is clicked and the last Chapter is being played, the first Chapter in the next Book will be played.

A 2-second press will skip approximately 17 seconds² within the current Chapter.

A continuous press³ will continue to skip within the current Chapter until the button is released or the end/beginning of the Chapter is reached.

¹During continuous press, PATHWAY will emit a low beep and the LED will blink.

²Actual time may vary.

³The buttons **◀◀▶▶◀◀▶▶** can remember button clicks. For example, if you click 5 times on **▶▶**, playback will resume after quickly skipping forward 5 Chapters.

⁴After the last Chapter in the last Book

is played, playback will automatically continue with the first Chapter of the first Book.

PAUSING/ BOOKMARKING

While in playback, click **▶||** to pause the audio. PATHWAY will bookmark¹ the current position and the LED will begin to blink intermittently.

To resume playback, click **▶||** again.

¹Bookmarking on PATHWAY is completely automatic. Whenever paused, or turned off, PATHWAY will bookmark the current playback position.

²If PATHWAY is paused for more than 5 minutes, it will automatically turn itself off.

5

RESETTING PATHWAY

Resetting player defaults (listed below) is done by pausing the player and pressing **◀◀** for 2 seconds. PATHWAY will beep 3 times and then turn itself off (additional 2 beeps).

- Playback bookmark (to the beginning of the first Book)
- Volume level (to medium)

EARPHONES, SPEAKERS AND VOLUME

Insert earphone or speaker plug into the auxiliary 3.5mm stereo audio jack on the bottom of the player. The internal

6

speaker will turn off and audio will be output to the connected device. When removing the plug, the internal speaker will turn back on.

A click on **−** or **+** will decrease/increase volume one level. A continuous press will adjust the loudness until the minimum/maximum is reached.

Once minimum/maximum is reached, a double-beep is played and will continue until the button is released.

PATHWAY remembers the current volume and will remain set at this level even after the player is turned off and restarted.

¹Volume adjustment works while in Playback and Pause Modes. When in Pause Mode, the player will beep at each level to indicate the current loudness.

7


INTERNAL MEMORY

Folder and file rules:

- There must be exactly one folder level (Book)
- There may be from 1 to 999 folders
- Each folder may contain from 1 to 999 audio files
- Audio files must be MP3
- Folder names must start with 3-digit prefix beginning with 001
- Folder names may include freeform text
- File names may be freeform text but numeric prefixes are recommended
- Folders and files must sort in the desired playback order

8

- Max folder name length: 58
- Max file name length: 185

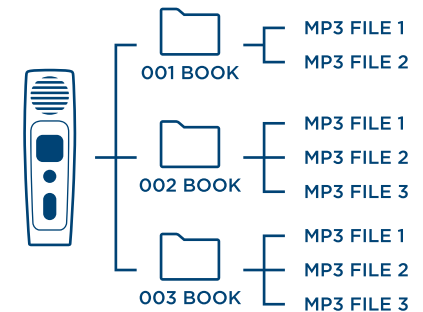

For details on loading audio, see the Pathway User Guide at megavoice.com

9

BATTERY OPTIONS

PATHWAY is powered by a single AA-sized battery. It can be one of the following:

- Lithium-Ion
- A dry (disposable) battery¹
- A rechargeable battery²

The battery compartment is accessible from the back of the player. To remove the cover, take out the safety screw at the bottom to expose the cavity and access the battery.

¹Play time using a dry battery is about one third less than with the Lithium-Ion battery.

²Requires external charger (not included)

10

BATTERY CHECK

PATHWAY monitors the battery capacity. When the installed battery (any of the listed options) depletes to a certain level, the player will notify of low battery by causing the LED to blink intermittently.

Once the battery reaches the minimal level required for proper operation, PATHWAY will bookmark the current playback position and turn itself off.

CHARGING INSTRUCTIONS¹


¹This section applies only to the Lithium-Ion battery option.


With proper care, a Lithium-Ion battery should perform well for several years. If

11

PATHWAY was shipped with this battery, it would only be partially charged.

Please fully charge it before the first use following one of the charging methods below:

 Connect any standard "USB" charger (regulated +5VDC, minimum 300mA) to the micro-USB port on the bottom of the player for about 2 hours² or until the power LED stops blinking.

 Connect PATHWAY to any standard computer USB port using a "USB to micro-USB" cable for about 2 hours³ or until the power LED stops blinking.

³Actual charge time will vary according to the current battery capacity.

12

BATTERY CARE¹

¹This section applies only to the Lithium-Ion battery option.


- When not in use and whenever possible, keep the player in a cool place, which will also help to preserve battery life.
- Before stowing the player for prolonged periods, make sure the battery is at least partially charged.
- If stored for *extended* periods, it is recommended to recharge the player at least every 6 months, in order to prevent the battery from losing its ability to recharge.
- Should the battery become defective and unable to accept a charge, it is still possible to operate the player using a

13

USB cable connected to a computer or an electric charger.

PROBLEMS WITH PATHWAY?

If your PATHWAY will not turn on, please try the following:

1. If the Lithium-Ion battery is installed, please make sure it is charged according to CHARGING INSTRUCTIONS.
2. If using a disposable battery, make sure the battery is good. If not, replace it.
3. If the battery is OK, force a reboot of the player by holding  for about 10 seconds. The player should restart automatically.

14

4. If step #3 failed, try removing the battery and then reseating it in the battery compartment.

5. If none of the above succeeded, please contact your sales representative for support.

15

WARNINGS




- Care must be taken to set the volume at the lowest level that can be heard comfortably. Prolonged exposure to loud sound can cause gradual hearing loss.
- DO NOT expose player or battery to fire or extreme heat.
- Stop using player if you observe abnormal heat, odor, discoloration, leakage or deformation, especially near the battery compartment. Refer to a qualified technician for service.
- If the battery is removed from the player, handle it with care. Keep the exposed battery out of reach of children. DO NOT burn, puncture,

16

disassemble, or modify battery.

- If battery leaks, dispose of it carefully in accordance with all local laws. Wash any skin or clothing exposed to battery liquid and avoid swallowing or contact with eyes. In the case of swallowing or contact with eyes, seek medical care immediately.

17

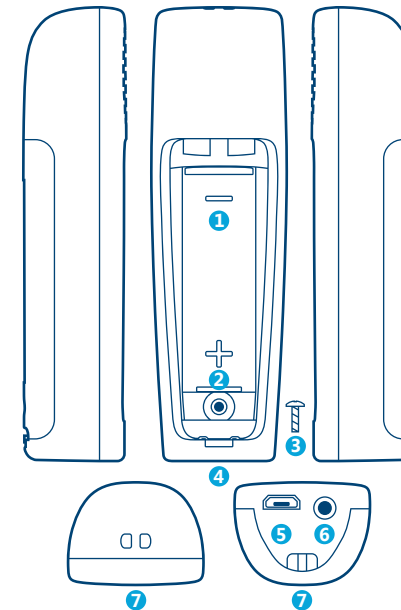

18

OTHER SIDES

- 1 Battery & door removed in back view
- 2 Battery compartment screw hole
- 3 Battery compartment screw
- 4 Tab for battery compartment access
- 5 Micro-USB port
- 6 3.5mm stereo audio jack
- 7 Lanyard holes

19

OTHER PRODUCTS

Envoy 2 Elite: The most sophisticated and advanced of all the MegaVoice solar audio Bibles. Includes a recorder, FM radio, flashlight, microSD card reader, and audio playback speed control all on a secure 8GB audio player.

Envoy 2 Ember: The Ember is an ideal discipleship tool for those areas where providing physical and spiritual light is crucial. Includes a flashlight, microSD card reader, and audio playback speed control all on a secure 8GB audio player.

Envoy 2 S Dual: The only side-by-side bi-lingual audio Bible that can instantly toggle between similar passages, books and chapters. The Envoy 2 S Dual's keypad contains two extra buttons that toggle between the separated content.

20

Envoy 2 S: The ideal solar powered audio Bible for those who are providing content in only one language and don't require all the extra features of the Envoy 2 Elite and Ember. It is the most simple and lowest cost solar powered audio player that can hold a full Bible or up to 800 hours¹ of audio content.

¹Dependent on the quality and size of audio files.



© 2020 MegaVoice Ltd. Made in China

MV - Pathway UM - Accordion - Eng - H - 2020.07.30-1.2.0

21