



INSTRUCTION OF YL-992 VIBRATING ALARM CLOCK

Press the Top button, time will be announced.

In normal time display, press 'MODE' button to choose between chime On/Off, alarm On/Off and vibration On/Off. When chime on, the  symbol will be appeared. When the alarm on, the  symbol will be appeared. Continue to press 'MODE' button to choose the alarm sound. Press 'SET' to change the sound into either in 'PiPi', 'Dong' or "Rooster" sound.

SET ALARM TIME

Press 'Mode' button to set the alarm time. When hour is flashing, press 'SET' button to set hour. Continue to press 'MODE' button to set the minute. When minute is flashing, press 'SET' button to set minute.

SET TIME

Press 'MODE' button to set the time set mode. Press 'MODE' button to set the year, month and date. Press 'SET' button to change the day until the correct day displayed. Hour is flashing, press 'SET' to set hour. Press 'MODE' button when the correct hour is displayed. Minute is flashing, press 'SET' button to set minutes. Press the 'MODE' button and then press 'SET' to choose the 12 hour mode display.

COUNTDOWN TIMER

Press 'MODE' button to set the countdown timer. Press 'SET' button to set the countdown hour. Then, press 'MODE' button to set the countdown minute. Press 'SET' to change the countdown minute. Last, press 'DATE' to turn On/Off the countdown timer.

*****ATTENTION*****

If the LCD screen fades and the sound becomes weak or the function is abnormal, please change the battery.(2pcs AAA batteries)