

iLuv[®]

 
**Wireless Charging Bluetooth[®]
Jumbo LCD Display Dual
Alarm Clock FM Radio,
USB Charging Port and Bed
Shaker**

TimeShaker 6Q Wow

User Manual (Ver 1.2)



WARNING AND SAFETY INSTRUCTIONS

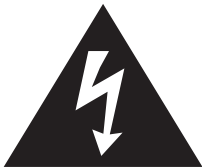

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.




CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONEL.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. All the safety and operating instructions should be read before the product is operated
2. The safety and operating instructions should be retained for future reference.
3. All warnings on the product and in the operating instructions should be adhered to.
4. All operating and use instructions should be followed.
5. Use of controls or adjustments or performance other than those specified may result in hazardous radiation exposure.
6. Do not use this product near water or expose to rain to prevent fire or shock hazard, i.e. bathtub, washbowl, kitchen sink, laundry tub, wet basement, or swimming pool, etc.
7. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
8. Unplug TimeShaker 6Q Wow during lightning storms or when unused for long periods of time.
9. When main plug is connected, TimeShaker 6Q Wow is operational. In order to disconnect TimeShaker 6Q Wow completely, the main plug should be disconnected from the main socket outlet.
10. Battery should not be exposed to excessive heat, such as sunshine or fire.
11. If battery is incorrectly replaced, it may cause explosion. Replace only with the same or equivalent type.


WHAT'S INCLUDED

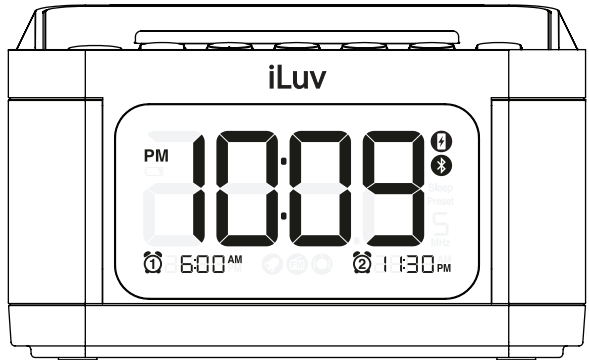


TimeShaker 6Q Wow

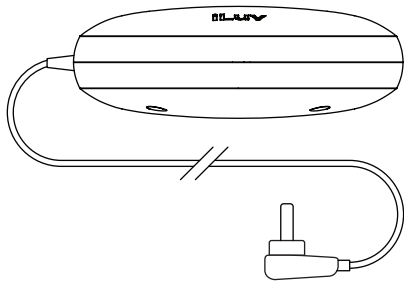

Wired Shaker

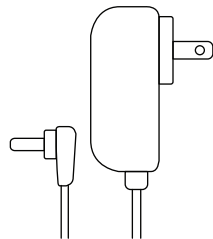 


Power Adapter

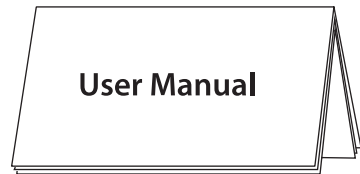 


User Manual

OVERVIEW OF THE PRODUCT

 Top

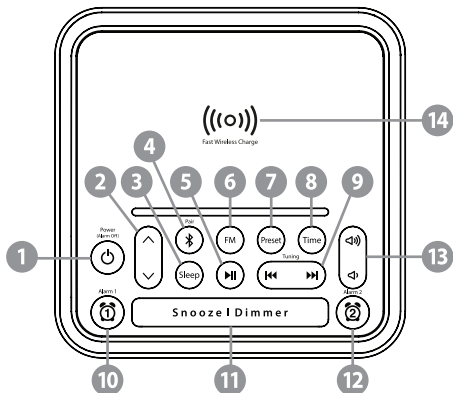


Front

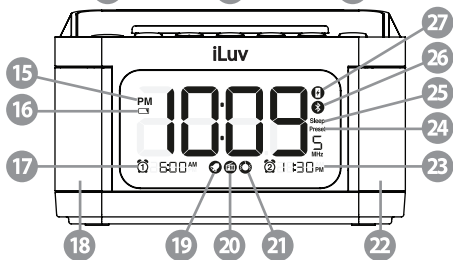 


- 1 RADIO/BLUETOOTH ON/OFF, STOP ALARM
- 2 UP/DOWN (Setup only)
- 3 SLEEP
- 4 BLUETOOTH/PAIR
- 5 PLAY/PAUSE
- 6 FM RADIO
- 7 PRESET
- 8 SET TIME
- 9 FREQ/TRACK -/+
- 10 ALARM 1 SET/ON/OFF
- 11 SNOOZE/DIMMER
- 12 ALARM 2 SET/ON/OFF
- 13 VOLUME -/+
- 14 WIRELESS CHARGING PAD
- 15 PM INDICATOR
- 16 LOW BACKUP BATTERY INDICATOR
- 17 ALARM 1 INDICATOR
- 18 LEFT SPEAKER
- 19 BUZZER INDICATOR
- 20 FM RADIO INDICATOR
- 21 SHAKER INDICATOR
- 22 RIGHT SPEAKER
- 23 ALARM 2 INDICATOR
- 24 PRESET INDICATOR
- 25 SLEEP INDICATOR
- 26 BLUETOOTH INDICATOR
- 27 WIRELESS CHARGING INDICATOR

 Back

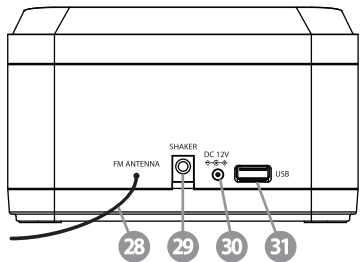

- 28 FM RADIO ANTENNA
- 29 SHAKER JACK
- 30 DC POWER JACK
- 31 USB CHARGING PORT
- 32 BATTERY COMPARTMENT COVER

 Bottom

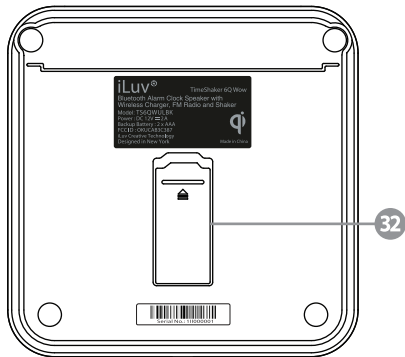


CONNECTING POWER

Connect the DC plug of the power cord to the **30 DC POWER JACK** on the back of the unit and connect the AC plug to a nearby wall outlet.

CONNECTING SHAKER


- 1 Connect the plug of the shaker cord to the **29 SHAKER JACK** on the back of the unit.
- 2 Place the shaker under the pillow.

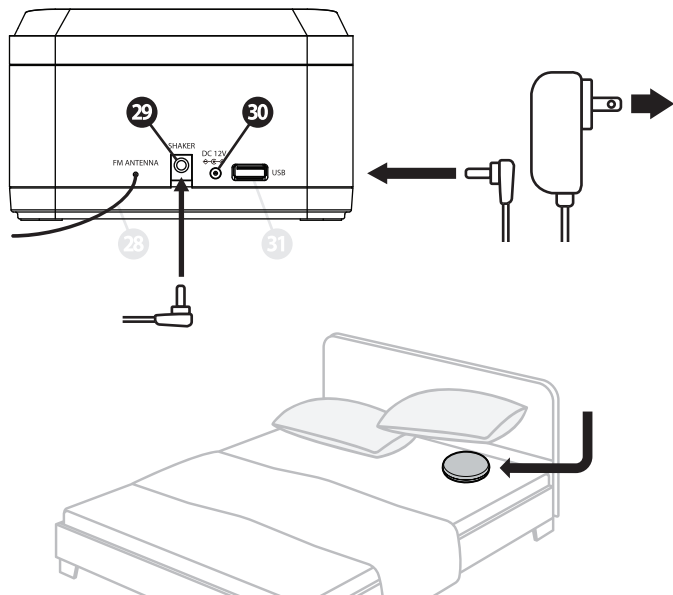

SET CLOCK TIME

! The default time is set to **12:00AM** in 12 Hour Time format.
(The display will be blinking if the clock time is not set.)

- 1 Press & HOLD **8** [**Time**] for 2 seconds to enter the **Time Setup** mode. '12hr' will be flashed on the screen.
- 2 Press **2** [**Up/Down**] to toggle between 12hr or 24hr formats and press **8** [**Time**] to confirm the format.
- 3 While **Hour** is blinking, Press **2** [**Up/Down**] to adjust (Press & HOLD to fast adjust) and press **8** [**Time**] to set hour.
- 4 While **Minute** is blinking, press **2** [**Up/Down**] to adjust (Press & HOLD to fast adjust) and press **8** [**Time**] to set minute and complete the time setup.

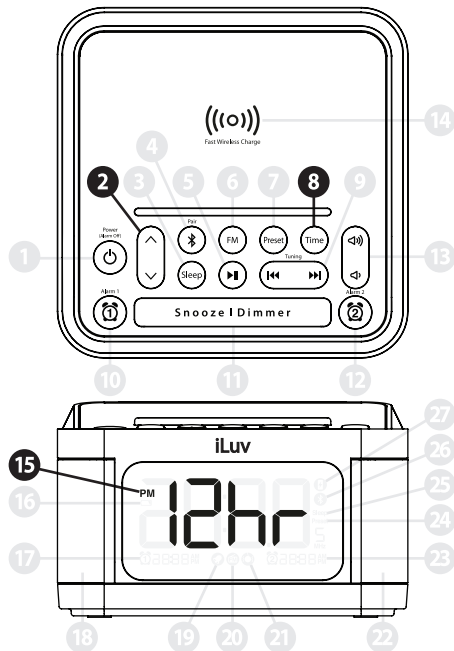


SET ALARMS

! TO SET AN ALARM:

Alarm Time > Alarm Source > Alarm Sound Volume

Default Alarm Time : Alarm 1 - 6:00 AM, Alarm 2 - 7:00 AM

- 1** Press & HOLD **10** [**Alarm 1**] for 2 seconds to enter the **ALARM SETUP** mode. Once in the alarm setup mode, the display will start blinking.
- 2** **Set Alarm Time:**
While Hour is blinking, press **2** [**Up/Down**] to adjust hour (Press & HOLD to fast adjust) and press **10** [**Alarm 1**] to set an alarm time hour.
While Minute is blinking, press **2** [**Up/Down**] to adjust (Press & HOLD to fast adjust) and press **10** [**Alarm 1**] to set.

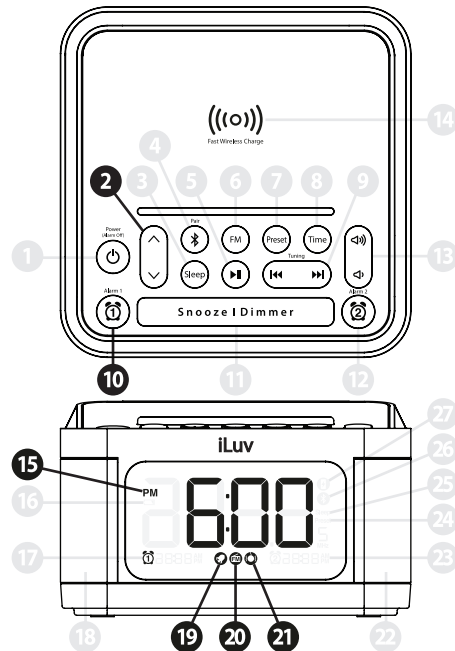

3 Choose Alarm Source:

Press **2** [Up/Down] to choose alarm source among **19** **Buzzer** or **20** **FM Radio** or **21** **Shaker** or **19** **21** **Buzzer + Shaker** or **20** **21** **FM Radio + Shaker**. The source you are currently setting will blink.

Press **10** [Alarm 1] to exit setting or set the alarm sound volume.

3-1 Set Buzzer or Radio Volume:

Press **2** [Up/Down] to adjust alarm sound volume level between **V5** to **V30** from initial level **V15**.


Press **10** [Alarm 1] to make selection.

(Tuned channel on the radio will be used for the radio alarm.)

4 Once the alarm setup is complete, corresponding alarm indicator will be displayed.

Note:

Apply same routine to set **Alarm 2** with **12** [Alarm 2] button.

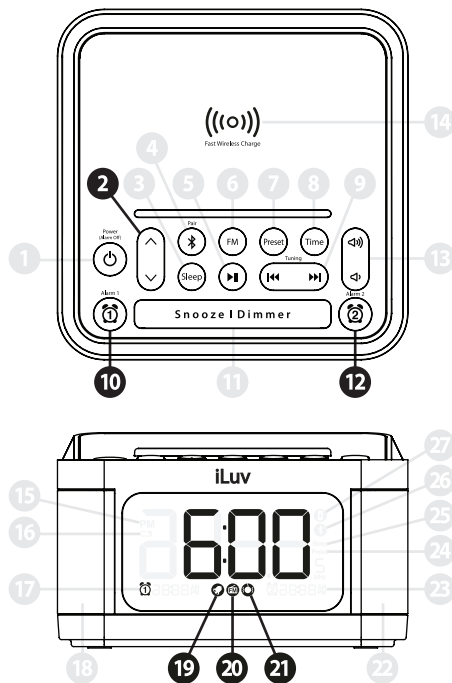

ENABLE/DISABLE ALARM


! Please make sure if any of **Alarm 1** or **Alarm 2** is disabled by turning each one off, specified alarm sound or vibration won't be played at the alarm time. It should be turned on again to be enabled.

Alarms can be **Enabled/Disabled** by pressing **10 [Alarm 1]** or **12 [Alarm 2]**.

When **17 [1]** and/or **23 [2]** is showing, the alarm is set to **ON** and will activate at the scheduled time. If the indication is not showing, the alarm is set to **OFF**.


Note:

Shaker works only when properly connected to the unit.

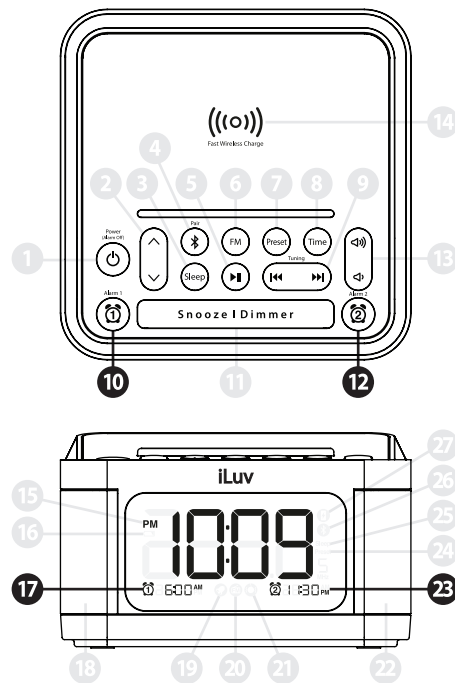



SNOOZE/STOP ALARM

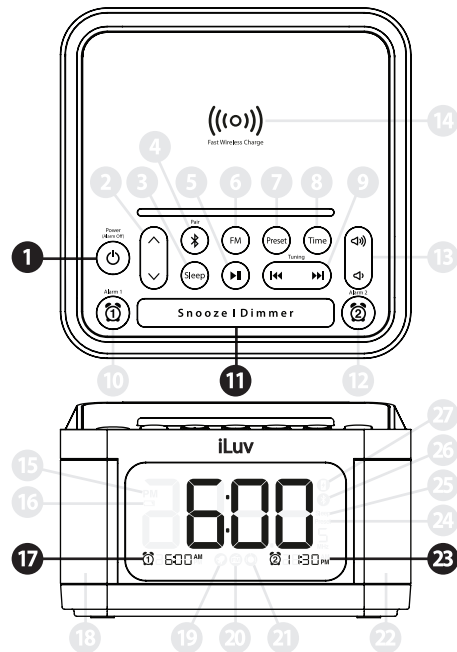
- 1 When the alarm is activated, the corresponding **17 Alarm 1** or **23 Alarm 2** indicator will blink on the display.
- 2 Press **11 [Snooze]** to temporarily silence the alarm. The alarm will snooze and reoccur at an interval of every 9 minutes. The corresponding **17 Alarm 1** or **23 Alarm 2** indicator will blink on the display during the snooze period.
- 3 To **STOP** the alarm completely, press **1 [Power]**. This will stop the alarm until the next alarm time.



SLEEP TIMER FUNCTION

! The Sleep Timer Function allows you to set a stop action for the **FM Radio** or **Bluetooth** after a specified time has elapsed.



- 1 Press **1** [] to turn on the audio function.
- 2 Press **4** [] or **6** [**FM**] to select desired audio source from Bluetooth or FM Radio. (Go to page 16 for Bluetooth and page 14 for FM Radio to refer setup instructions of each.)
- 3 Press **3** [**Sleep**] to set the sleep timer while **Bluetooth** audio is playing. Continue to press **3** [**Sleep**] until reach to the desired timer from **10** to **90** in 10 minutes interval and wait 5 seconds to keep the selected timer: **90 > 80 > ... > 10 > OFF**
- 4 **25** Sleep indicator will be displayed once the sleep timer is set.

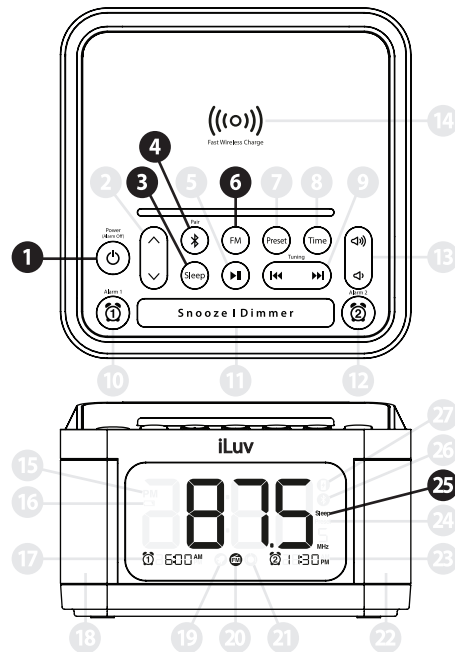

- 5 The **Bluetooth** audio or **FM Radio** will automatically turn off once the set timer expires.


- 6 To check the remaining time until sleep, simply press **3 [Sleep]**. Timer will change to the next timer interval if **3 [Sleep]** is pressed again while the remaining time is displayed.

- 7 To turn off the timer, press **3 [Sleep]** repeatedly until the value toggles to **OFF** and wait 5 seconds. **25 SLEEP** indicator will disappear.

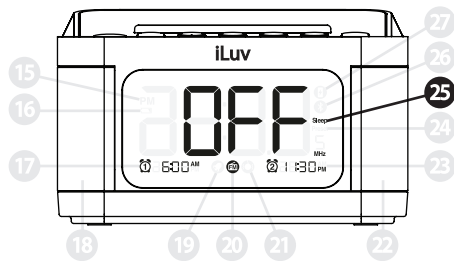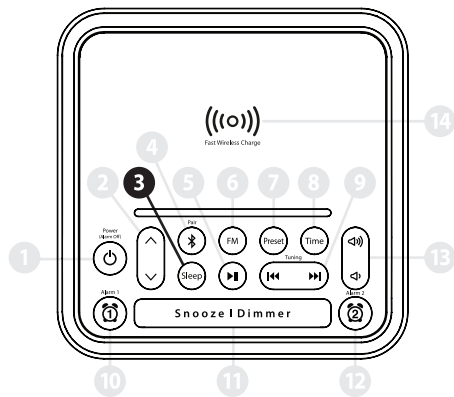

USING FM RADIO

- 1 Unravel and extend the antenna to improve the FM radio signal reception.
- 2 Press **1** [Power] to turn on the audio function.
- 3 Press **6** [FM] to select FM Radio.
- 4 Press **9** [Left Arrow] or [Right Arrow] to change the FM radio frequency.
- 5 Press & HOLD **9** [Left Arrow] or [Right Arrow] to automatically scan available channel.
- 6 To turn the FM radio off, press **1** [Power].

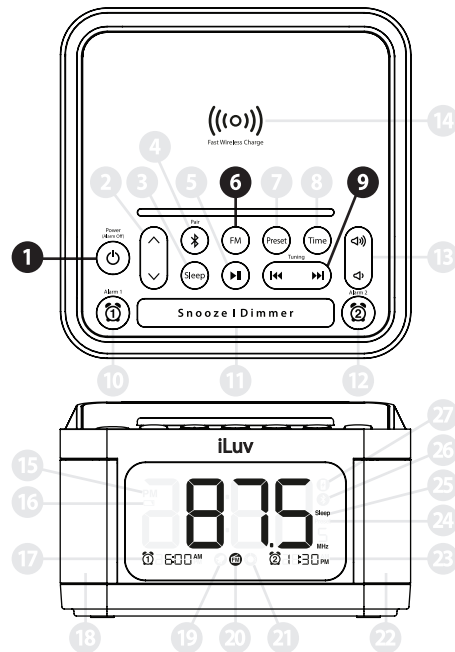


SETTING FM RADIO PRESETS

! Preset option is only available when the Radio is on.

- 1 While FM radio is turned on, press **9** [**⏪**] or [**⏩**] to select the desired frequency.
- 2 Press & HOLD **7** [**Preset**] until the preset number is blinking.
- 3 Toggle through **9** [**⏪**] or [**⏩**].
- 4 Press **7** [**Preset**] to program the preset with the selected frequency.

USING FM RADIO PRESETS

- 1 While FM radio is turned on, Press **7** [**Preset**] and press **9** [**⏪**] or [**⏩**] to change the preset stations: **P01** > **P02** > ... > **P20**

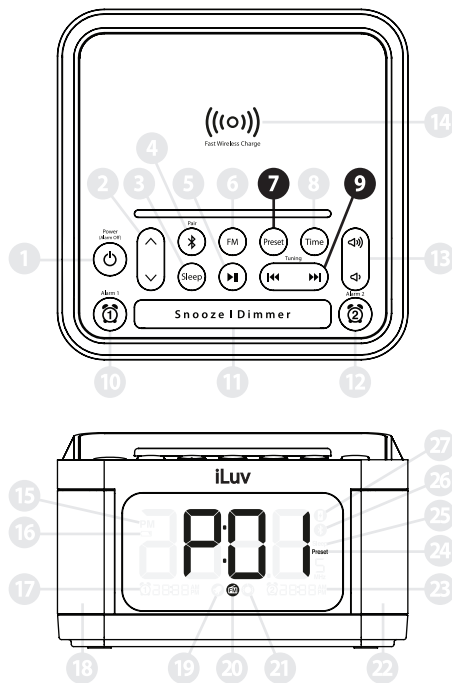


PAIRING WITH OTHER DEVICE

! Effective Bluetooth range: 33ft (10m)

- 1 Press **1** [⏻] to turn on the audio function.
- 2 Press **4** [📶] to select Bluetooth.
- 3 If the unit is turned on for the first time, it will automatically enter Bluetooth Pairing mode and the **26** Bluetooth indicator will blink.
- 4 Go to settings - Bluetooth on your mobile device and turn on Bluetooth. iPhone/iPads will scan for devices automatically while Android devices will require you to press Scan.
- 5 Tap “iLuv TimeShaker 6Q Wow” from the discovered devices list.

OTHER DEVICES 🌟

iLuv TimeShaker 6Q Wow

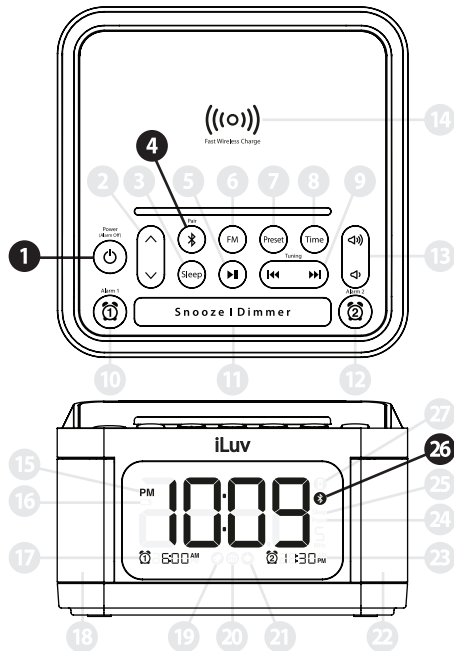


- 6** Once two devices are connected successfully, a voice prompt **“Bluetooth connected”** will be heard and the **26** Bluetooth indication stops blinking.

Note:

To enter the pairing mode manually, press & **HOLD** **4** [**⌘**] for 2 seconds after turning on the audio function.


AUTO RECONNECTING

- 1** If the paired mobile device is out of range or disconnects from the TimeShaker 6Q Wow, the **26** Bluetooth indicator will start to blink. Connection will automatically be restored once the paired device appears within range.
- 2** In case of disconnection or if the connection is not restored automatically, press & **HOLD** **4** [**⌘**] for 2 seconds to reconnect or restart pairing.

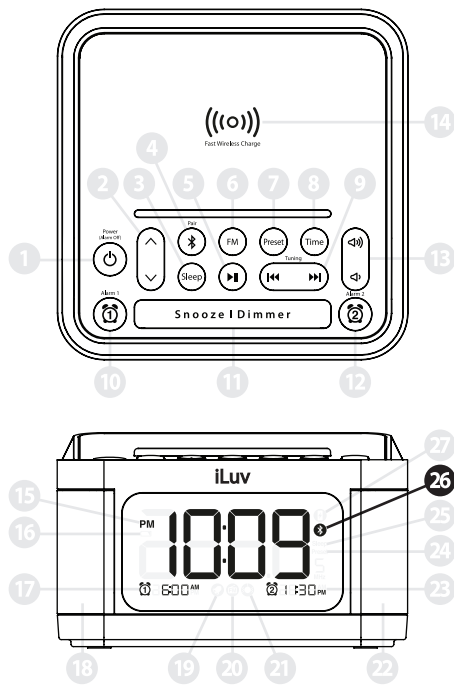


MUSIC PLAYBACK

- 1 Once connected to your device, play music or audio from your preferred app.
- 2 Press **5** [**▶||**] to play your music.
- 3 Press **5** [**▶||**] to pause while music is playing
- 4 Press **13** [**Volume Up/Volume Down**] to increase or decrease volume (00-30).
- 5 Press & HOLD **9** [**⏮**] to skip to the previous track.
- 6 Press **9** [**▶|**] to skip to the next track.

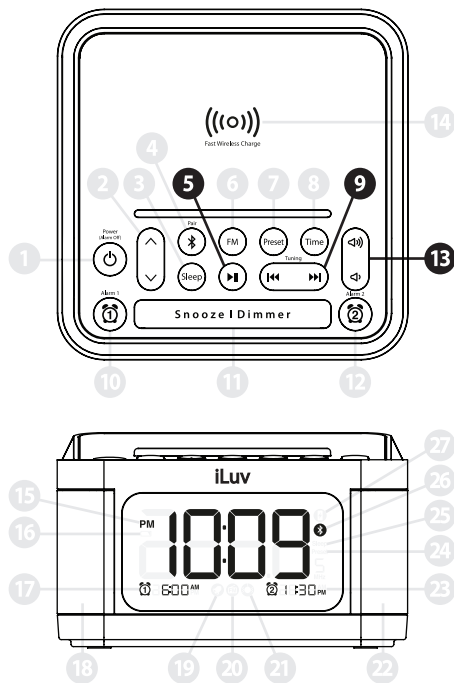

DISPLAY DIMMER

- 1 Press **11** [**Snooze/Dimmer**] to adjust the brightness from 10 levels; 100 (maximum brightness) to 00 (minimum brightness).
- 2 Default brightness level is **100**.

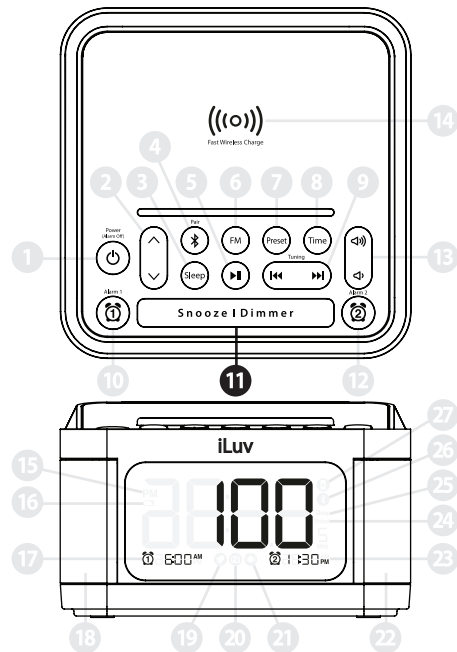


! IT IS SUGGESTED TO CHARGE YOUR PHONE WITH A CABLE INSTEAD OF A WIRELESS CHARGER DURING THE PHONE SOFTWARE UPDATE. OTHERWISE, CHARGE YOUR PHONE FULLY BEFORE THE PHONE SOFTWARE UPDATE.

Place your Qi enabled smartphone on the center of the **14** Wireless charging pad.

Compatible Products for Wireless Charging:

iPhone 11/11 Pro/11 Pro Max/X/XS/XS Max/XR/8/8 Plus;
Samsung Galaxy S10/9/8/7/6 series, Note 10/9/8/7/5 series; LG
V35/V30 series, G7/G6 series; Google Pixel 4/4 XL/3/3 XL, and
other Qi enabled smartphones/tablets and accessories.

! PMA wireless charging is not supported.

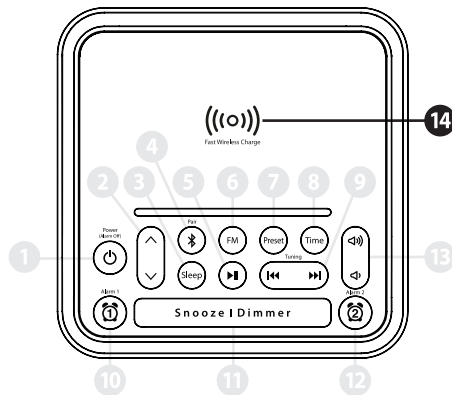

WIRELESS CHARGE INDICATOR

27 **Wireless Charging Indicator** is displayed on the top right corner of the display. Refer to the status indications below:


1 **Off** : Standby Mode

2 **On** : Charging


3 **Blinking** : Abnormal

***If the charging indicator blinks:**

- Check if your device supports Qi wireless charging
- Place your device in the center of the **14** **Wireless charging pad**
- Remove any protective cases containing magnets, metal, or materials thicker than 0.12" (3mm)

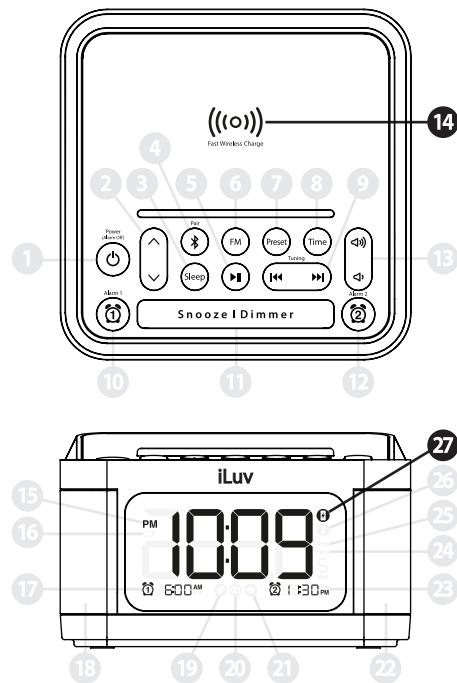

- 1** To charge other devices such as a smartphone or tablet, connect one end of the USB charging cable (not included) to the **31** USB charging port on the back of the main unit.
- 2** The TimeShaker 6Q Wow cannot access the content of the connected device.
- 3** The USB Charging port is compatible with most smartphones, tablets, portable speakers, wireless headphones, wearables, etc.

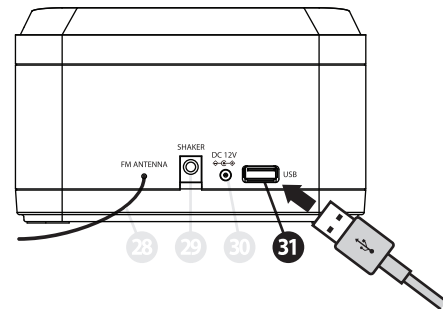

BATTERY BACKUP OPERATION

BACKUP BATTERY WILL NOT OPERATE THE CLOCK


- 1** TimeShaker 6Q Wow is equipped with a memory system that can be powered with two (2) AAA batteries (not included). The power failure protection circuit will not operate unless the batteries are installed.
- 2** The backup battery will save all previously programmed settings when normal household power is interrupted. The backup battery will not operate the unit's normal functions.
- 3** Normal operation will resume after the power is restored.

INSTALLING THE BATTERY

! The back up battery is NOT a secondary source of power. This function acts as a memory saver for your settings in the case of a power disconnection. It is recommended to replace the battery at least once a year.

- 1** Remove the **32** Battery Compartment Cover.
- 2** Place two (2) AAA batteries (not included) according to the polarity marked inside.
- 3** Place the battery compartment cover to its original position.

! In order to save your settings, do NOT disconnect the power adapter when replacing your batteries.

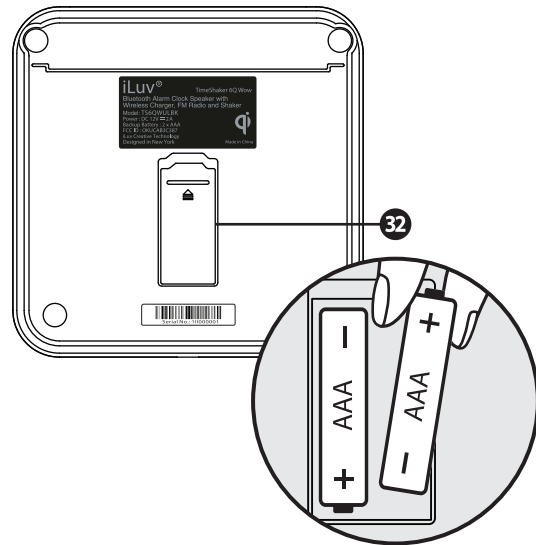

SPECIFICATIONS

Tuner Range	FM: 87.5 – 108 MHz
Number of Preset Radio Stations	20
AC Power Adapter	Input: AC 100-240V, 50/60Hz Output :DC 12V/2A
Charging Output	Wireless: 7.5W/10W USB: 5V/1A

COMPLIANCE WITH FCC REGULATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment



Designed by iLuv in New York

LIMITED WARRANTY

WHAT IS COVERED?

iLuv Creative Technology (“iLuv”) warrants, to the original purchaser, that its products will be free from defects in materials, parts, and workmanship for the periods designated in each Product. The Warranty begins on the date of product purchase and covers a period of two years for products purchased in the European Union, and one year for products purchased in other countries (including the United States and Canada), iLuv can exercise the option, during any warranty service, to replace your product with a new or remanufactured unit, equivalent to your original purchase. For information on proper installation, operation and use consult the manual supplied with the product. If a replacement manual is required, visit our website, www.iLuv.com to download a manual.

FCC NOTICE (USA)

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CUSTOMER SUPPORT

If you have any question or need support, please contact us by visiting <http://support.iLuv.com> or call our customer service department at 1-866-807-5946.

EXCLUSIONS

This Warranty does NOT apply if the serial number is altered or removed. It does not cover cosmetic damage, antenna damage or loss, damage to AC power cords, cabinets, headbands, ear-pads, or damage due to power line surges, connection to an improper voltage source, the use of improper settings, general misuse, mishandling or improper application, accidents, acts of God, repairs attempted by an unauthorized service agent, or damage incurred while the product is being returned to iLuv. If the product was purchased outside the United States, please find an authorized distributor as listed on our web site: www.iLuv.com

OBTAINING WARRANTY SERVICE

Customers must obtain a Customer Return Authorization number (CRA) on our web site, www.iLuv.com (EXPRESS CUSTOMER SUPPORT) to obtain a ticket. Fill out the on-line form including the product's Date of Purchase, its Model Number, a brief description of the problem, and your daytime telephone number, or customers in the United States and Canada may contact our Customer Service Department at (866) 807-5946 if the problem appears to be related to a defect in material or workmanship.

RETURNING YOUR PRODUCT

The product must be accompanied with a dated proof of purchase, indicating the place of purchase, the model, and amount paid. Send the unit, prepaid, to the address below in suitable protective packaging that meets UPS standards. You must include the CRA number on the outside box, and your telephone number and return shipping address within the package. Return shipments are at the customer's expense, and the return must be accompanied by the original proof of purchase. We strongly recommend insuring the shipment as appropriate because the customer is responsible for the product until it arrives at iLuv (for U.S. returns) or its authorized distributor (for all other countries). REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. iLuv SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state and country to country.

INSTRUCTIONS ON ENVIRONMENT PROTECTION

Do not dispose of this product in the usual household garbage at the end of its life cycle; bring it to a collection point for the recycling of electrical and electronic appliances. This symbol on the product means the instructions for use or the packing will inform about the methods for disposal. The materials are recyclable as mentioned in its marking. By recycling, material recycling, or other forms of re-utilization of old appliances, you make an important contribution to protect the environment. Please inquire at your local community administration for the authorized disposal location.

iLuv Creative Technology
2 Harbor Park Drive
Port Washington, NY 11050