

# Talking Alarm Watch User Manual

## Symbol function/ button position:

● : Alarm-on icon

🕒15: Hourly announcement 1

🕒24: Hourly announcement 2


PM: Afternoon time indicator

AL : Alarm clock setting indicator

Independent Living Aids  
137 Rano St  
Buffalo, NY 14207

## Mode Transfer:

Press S4 button to change the Mode according to the following order:

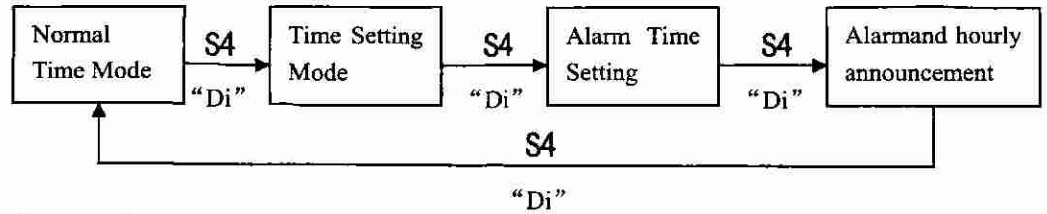

## Operation:

### 1. Set time

Press S4(MODE) button one time to enter into time setting mode, meanwhile the numbers flicker. Press S2(MIN), S3(HOUR) to adjust minute, hour to the current time.

### 2. Set alarm time



Press S4(MODE) button two times to enter into alarm time setting mode. AL symbol display, and numbers flicker. Press S2(MIN). S3(HOUR) button to adjust minute, hour to the needed alarm time.

### **3. Chose Alarm music and turn on/off music**

Press S4(MODE) button three times to set alarm music and alarm on/off .

Both of alarm symbol and hourly announcement symbol flicker.

Press S2 to set alarm on/off: alarm symbol appear, alarm is on; alarm symbol disappear, alarm is off.

Press S3 to set hourly announcement: press S3 one time, hourly announcement 1 appears, and announcement 2 appear , it means announcement 1 is on( Hourly announcement 1 will announce all the hourly times whole day); press S3 the second time , hourly announcement 2 appears, and announcement 1 appears , it means announcement 2 is on( Hourly announcement 2 will announce the hourly times from 7 o'clock in the morning to 9 o'clock in the evening);

### **4. Alarm music choice , 12/24 hour system transfer**

Under the normal time mode, press S3 to transfer the 12/24 hour system for the time display; Press S2 to chose the alarm music; press S1 to announce the current time.

Independent Living Aids  
137 Rano St  
Buffalo, NY 14207

#### **Specification:**

Accuracy: 8 seconds more or less

Battery: AG13

Weight:74 g

Width of Watch Shell: 40mm

The length for both watch and watch belt is 250MM